



Q80 User Manual

INTRODUCTION

Thank you for purchasing this mobile phone. To obtain the best performance of your phone, please read this user manual carefully.

User manual

Table of Contents

1	Safety	4
1.1	Safety Precautions	4
2	Introduction	6
2.1	Phone and Accessories	6
2.2	Your Phone.....	6
2.3	About SIM Card and the Battery	7
2.4	To switch ON and OFF.....	7
3	Phonebook.....	7
4	Calling	8
4.1	Call divert	8
4.2	Call waiting.....	8
4.3	Call Barring.....	8
5	Call Logs	9
5.1	Missed calls/dialed calls/received calls	9
5.2	Delete call logs	9
5.3	SIM1-2 call timers.....	9
5.4	SIM1-2 call cost	9
6	Messages.....	9
6.1	Write SMS	9
6.2	Inbox	10
6.3	Drafts	10
6.4	Outbox	10
6.5	Sent Messages.....	10
6.6	Collections.....	10
6.7	Schedule SMS.....	10
6.8	SMS Signature	10
6.9	Delete Messages	10
6.10	Message settings.....	11
6.11	Voicemail Server.....	11
6.12	Broadcast Message.....	11
7	Settings	12
7.1	Customized Phone & Call Settings	12
	Display Settings-	12
7.2	User Profile Setup.....	13
7.3	Security Settings.....	13
8	Multimedia and Entertainment.....	14
8.1	Camera.....	14
8.2	Image Viewer	14
8.3	Video Player	15
8.4	Photo editor	15

User manual

8.5	Sound Recorder	15
8.6	FM Radio	15
8.7	Slide show	16
8.8	Music Player	16
9	Mi-Apps.....	16
9.1	Mi-Apps.....	16
9.2	Installing Opera Mini 4.2.....	16
3.	Start using Opera Mini 4.2	17
4.	Basic browsing.....	17
5.	Navigating a Web page	17
6.	Searching the Web.....	18
7.	Getting more from Opera Mini 4.2	18
8.	Using Speed Dial.....	18
9.	Bookmarking a Web address	18
10.	Using Opera Link	18
11.	Context menu functions	19
12.	View pages in landscape mode.....	19
13.	Scroll faster with shortcuts	19
14.	Exiting the Opera browser	19
10	Bluetooth	19
10.1	To Power ON/OFF.....	19
10.2	Visibility	19
10.3	To Search My (new) device	19
10.4	My name	20
10.5	Advance	20
11	Organizer.....	20
12	File Manager	21
13	WAP Services.....	22
13.1	WAP Browser.....	22
13.2	WAP Setup	22
14	WiFi.....	23
15	ezmail.....	23
16	Maintenance	28
17	Taking Care of your Device	28
18	After Services	28

1 Safety

1.1 Safety Precautions

 Please read through the following briefings carefully, and act in accordance with these rules, so as

to prevent causing any danger or violating any law.



Safe driving

1) Do not use the phone while driving. When you have to use the phone, please use the personal hands-free kit.

2) Please put the phone safely in the phone stand. Do not put it onto any passenger seat or any place from which it may fall down in case of vehicular collision or emergency braking.



Turn off during a flight: Flight is influenced by interference caused by the phone. It is illegal to use a phone on the airplane. Please turn off your phone during a flight.



Turn off the phone when within an area where blasting takes place: Be sure to strictly observe the related laws and statutes by turning off the phone when you are within, or in the vicinity of, an area where blasting takes place.



Turn off the phone when any dangerous goods are in vicinity: Please turn off your phone when you are close to a gas station or in the vicinity of any place where fuel and chemical preparations, or any other dangerous goods are stored.



In hospital: Please obey the related rules or bylaws of the hospital when using your phone in a hospital. Be sure to turn off your phone when near any medical equipment. Your use of any wireless transmission equipment, inclusive of the phone, will interfere with any medical equipment that is not protected fully, and other electronic equipment items, too. Should you have any question in this regard, please consult a related physician or medical equipment supplier.



Interference: Each and every phone's performance may be affected due to radio interference.



Professional service: The phone must be installed or repaired by no other personnel than professionals. You are likely to suffer a huge risk when you install or repair this phone by yourself, which also goes against the warranty rules.



Fittings and battery: You shall use the fittings and battery acknowledged by the phone manufacturer only. Using unauthorized accessories may tamper the warranty of the device.



Proper use: Please use the phone in the normal way. Do not touch the antenna unnecessarily after the phone is turned on.



Emergency call: You may enter a telephone number (112, etc.) to ask for emergency help after making sure that the phone has been turned on and is in the service status. Press the Send Key to call out.

Disclaimer: Micromax will not bear any responsibility for any incompliance with the above mentioned guidelines or improper usage of the mobile phone. Micromax keeps the right to make modifications to any of the content here in this user guide without public announcement in advance. The content of this manual may vary from the actual content displayed in the mobile phone. In such case, the latter shall govern.

2.1 Phone and Accessories

Open the packing box of the phone and check that you have the Phone, Standard Charger, Standard Battery, USB Cable, Earphone, Service Guide, Software CD and Warranty Card.

2.2 Your Phone



2.3 About SIM Card and the Battery

Please store the cards out of childrens reach.

The card and the contacts are vulnerable to damage due to scratching or bending. Therefore, be careful when using, inserting or removing the cards.

Be sure to switch off the phone before you insert or remove the battery or the card, otherwise, the phone may be damaged.

Insert the plug of the charger into the interface of the phone, and insert the charger into the power socket carefully. The battery icon will blink.

Tips:

The battery icon  displayed on the screen indicates that the battery power is low. Please charge the battery following the steps above.

Please charge the battery before you use the newly purchased phone. We suggest you charge the battery for 4 hours continuously for the first time.

Charging when the phone is in the ON mode will not influence the normal dialing and answering, but this needs to consume power, thus the time of charging will increase.

We suggest you recharge the battery when the power is used up so as to prolong the life of the battery.

2.4 To switch ON and OFF

To switch on: Long press **End key** when the phone is in the OFF mode.

If the phone lock has been activated, you need to enter the 4-digit password to unlock. (The preset unlock code is 0000.)

If the SIM card has been inserted in the phone, and the related PIN code protection is activated, you need to enter the 4-8 digit password to unlock.

Warning: If you enter three wrong PIN codes in a row, the SIM card will be locked and you need to enter the PUK code to unlock. Both the PIN code and PUK code are provided by the network operator.

To switch off: In the standby mode, long press **End key**.

3 Phonebook

You can store names and phone numbers in the memory of the phone or SIM card.

Menu > Phonebook

Use the touch pad to navigate through tabs that are present on the top of the screen:

•**Contacts:** View all the contacts and their details stored in our phone

•**Caller Groups:** Allows you to add a contact in caller groups under- friends, family, VIP, business, others.

•**Edit:** Allows you to add new entry, copy contacts, move contacts, delete all contacts, send phonebook contacts via Bluetooth contact and import and export contact.

•**Settings:** Set the settings for speed dial, phonebook view & storage, extra numbers, memory status & dialer speech.

4.1 Call divert

Menu > Settings > Call settings > SIM1-2 call settings>Call divert

With the Call Divert function (needs network support), you may divert incoming calls to another mobile phone or a direct line telephone, but not to any extensions of a fixed telephone.

4.2 Call waiting

Menu > Settings > Call settings > SIM1-2 call settings>Call Waiting

This function allows you to put the current call on hold and then answer a second one.

If, during a call, a new call comes in, you will hear a special alert sound and the screen will display the number of the new incoming call, which indicates that a third-party call is coming in and waiting for to answer.

4.3 Call Barring

Menu > Settings > Call settings > SIM1-2 call settings>Call Barring

The function is a GSM network service and can restrict outgoing and incoming calls selectively. If you need to change the settings of Restrict Calls, please contact your network operator to obtain the password for opening this service.

5.1 Missed calls/dialed calls/received calls

Press the top Calling Key to view> Dialed calls / Received calls/ Missed calls/ Rejected Calls

You may select

Menu>Call Logs>SIM1-2 call history

Call: Call the desired entry

Save to Phonebook: To save the number to the Phonebook

Edit: To edit the number to dial or save to the phonebook.

Send SMS: To write SMS to send to the number.

Add to blacklist: Add a number you wish to avoid/ignore under blacklist

Delete: To delete the entry.

Delete All: Delete all the registered entry in one go.

5.2 Delete call logs

Menu>Call Logs>SIM1-2 advance settings >Delete SIM1-2 call logs

You may select to delete **Missed, Dialed, Received** or **All** calls.

5.3 SIM1-2 call timers

Menu>Call Logs>SIM1-2 advance settings >SIM 1-2 call timers

View SIM 1-2 call timers

5.4 SIM1-2 call cost

Menu>Call Logs>SIM1-2 advance settings >SIM 1-2 call cost

View SIM 1-2 call cost.

6.1 Write SMS

Menu > Messages > Write SMS/MMS

Write the content of the SMS

Send to: Add contact number

Input Method: Select Multitap abc/Numeric/Insert Symbol

Edit options: Allows you to mark the text, copy all or cut all.

Slide Options: Allows you to add a slide 'before/after in the current mms.

Switch to MMS: Allows you to switch from SMS to MMS, manually.

Advanced: Insert text template/Insert attachment/contact number/insert contact name (embellish the characters of text)/ Insert bookmark.

Save: Save the mms/sms

Details: View the details of the MMS/SMS

6.2 Inbox

Menu > Messages > Inbox

Navigate through the tabs present on the screen above to view messages in your inbox by name, date, SIM1 and SIM 2.

All messages received on your phone are saved in this Inbox folder.

6.3 Drafts

Menu > Messages > Drafts

Messages composed by you can be saved under drafts to be sent some other time.

6.4 Outbox

Menu > Messages > Outbox

All messages that fail to get delivered on the concerned recipients number are stored in this outbox folder.

6.5 Sent Messages

Menu > Messages > Sent messages

All messages sent from your number are saved in this sent folder.

6.6 Collections

Menu>Messages>Collections

Allows you to save messages received in your inbox into this **archive** folder or choose and insert templates in your messages.

6.7 Schedule SMS

Menu>Messages>Schedule SMS

Allows you to schedule an SMS to be sent on a day and date specified by you.

6.8 SMS Signature

Menu>Messages>SMS Signature

Allows you to add a signature to messages composed by you.

6.9 Delete Messages

Menu>Messages>Delete messages

Delete messages from the following folders:

Inbox, Drafts, Outbox, Sent messages, Archive, All messages

6.10 Message settings

Menu>Messages>Messages settings

SMS Settings

Menu>Messages>Message settings>SMS settings

- Profile settings-
- Voicemail server
- Common settings- Set to receive Delivery reports, Reply path, Save Sent message.
- Memory status
- Preferred storage
- SIM1-2 text message counter

MMS Settings

Menu>Messages>Message settings>MMS settings

- Profiles- Select a profile from the available network profiles.
- Common setting

6.11 Voicemail Server

Menu > Messages > Voicemail server

Set the voice mail numbers. When connecting by GSM network, you can call and listen to the voice mail.

Note: This feature is network dependant.

6.12 Broadcast Message

Menu > Messages > Broadcast Message

The phone supports Broadcast Message. It is supported by GSM network. Broadcast messages are single-way messages sent to the users of the network operators by the message service center. For the contents and channel setup of broadcast messages, consult your network operator.

You need to set Receive Broadcast Message to **On** before you can use Broadcast Message.

Tip: If you have opened and turned on Broadcast Message, you can select **Read Message** to browse the broadcast messages received. The phone will display 5 broadcast messages at most, since old messages will be replaced by the messages newly received.

7.1 Customized Phone & Call Settings

Navigate through the tabs present on the top of the screen:

Normal Settings & Call Settings-

Functions	Description
User Profile	Menu>Settings> Normal Settings> User Profile
Power ON SIM Status	Menu>Settings> Normal Settings> Power ON SIM status
Reception Mode	Menu>Settings> Normal Settings> Reception Mode
Set time and date	Menu > Settings > Phone settings > Time and date
Schedule power on/off	Menu > Settings > Phone setup > Schedule power on/off To disable and enable status; to activate/deactivate, switch on/off, and time in turn.
Select language	Menu > Settings > Phone setup > Language
Preferred Input	Menu > Settings > Phone setup > Preferred input
Set Trackball sensitivity	Menu > Settings > Phone settings > Set trackball sensitivity
Caller ID- Set by Network	Menu > Settings > Call settings > SIM1/2 call settings>Caller ID
Set Call waiting	Menu > Settings > Call settings > SIM1-2 call settings>Call waiting
Set call Divert	Menu > Settings > Call settings > SIM1-2 call settings> Call Divert Tip: You can select Cancel all divert to cancel all the divert settings.
Set Call Barring	Menu > Settings > Call settings > SIM1-2 call settings> Call Barring. Restrict Calls is a GSM network service. Please contact your network operator to obtain the password for opening this service.
Select network	Menu > Settings > Network settings > SIM 1-2 network settings New Search: The phone will select a new network automatically. Select Network: The phone will search and display the list of known networks for you to select the desired one, after which, the phone will try to log in the selected network. If the selected network is registered successfully, it will prompt so. Select preferred network: To switch search methods.
Restore factory default	Menu > Settings > Restore factory settings Tip: You need to enter the phone password when you want to restore factory default. The preset phone password is 0000 . Please bear your password in mind. In case you forget it, contact the local dealer or an authorized service center.

Display Settings-

Functions	Description
Set Wallpaper	Menu > Settings> Display Settings > Set Wallpaper

User manual

Screen saver	Menu > Settings> Display Settings > Set Screensaver
Screen switch effect	Menu > Settings> Display Settings > Set screen switch effect
Display Setup	Menu > Settings > Display settings > Show date and time/ Show owner number/Clock type/Greeting text/Screen switch effect.
LCD Backlight	Menu > Settings> Display Settings > LCD Backlight

7.2 User Profile Setup

Functions	Description
Activate the profile mode	Menu > Settings> User profiles > Desired mode>Options > Activate
Activate 'vibration mode' in idle condition	Long press the \$ key on your keypad to activate the vibration mode
Set the ringtone for incoming calls	Menu > Settings > User profiles > Customize> Tone setup> SIM1-2 Incoming call
Set the ringtone for messages	Menu > Settings > User profiles > Customize> Tone setup> SIM1-2 message tone
Set the ringtone for key pad tone	Menu > Settings > User profiles > Customize> Tone setup> Keypad tone
Adjust the volume of Ring Tone / Key Tone	Menu > User profiles >Customize> Volume
Set Alert Type of ringing	Menu>User profiles> Customize >Alert type
Set the ring type	Menu > User profiles > Customize> Ring type
Set the Extra Tone	Menu > User profiles > Customize> Extra tone
Set the answer mode	Menu > User profiles > Customize> Answer mode

7.3 Security Settings

Functions	Description
Message Blacklist	Menu>Settings> Security Settings> Message Blacklist
Blacklist	Menu>Settings> Security Settings> Blacklist
Privacy Protection	Menu > Settings > Security settings> Privacy protection To view this folder you will be required to enter the default password that is '0000'. This feature allows you to password protect all the major data stored in your phone.
PIN code request	Menu > Settings > Security settings> SIM1-2 security settings>SIM 1-2 lock Warning: If you enter three wrong PIN codes in a row, you need to enter the PUK code to unlock. PIN code and PUK code are provided by the network operator.
Phone lock	Menu > Settings > Security settings > Phone lock The preset password is 0000
Auto keypad lock	Menu > Settings > Security settings> Auto keypad lock > Select the time for the auto keylock. Note: Long press the  key on your keypad to lock/unlock the phone.
Change password	Menu > Settings > Security Center> SIM1Security setup > Change password

8.1 Camera

Menu > Multimedia > Camera:

When the camera is activated, the phone enters the view finding status.

On the view finding screen, press **Ok Key** to capture.

Before shooting, you can set the following as needed. Select **Options >**

Switch to: Choose options from Photo Album, Video Recorder or switch to using the front camera.

Capture Mode: Choose from options available like Normal, Continuous shots etc while clicking photos.

Scene mode: Set scene mode.

EV settings: Set the exposure value settings

Face detection: Switch ON/OFF the face detection feature for sharper facial images.

White balance: Set White Balance.

Image Size: Set the size of the images

Advance settins: Choose to edit settings from the below:

- Storage-** Choose a location for storing your images in.
- Image quality-** Choose the quality of the images before clicking
- Shutter sound-** Choose a sound to indicate the photo has been clicked
- Banding-** Choose the band
- Self Timer-** Set a timer for clicking photos
- Effects-** Set the special effects of photos, such as Grayscale, Sepia, and Colour Invert.
- View-** Set the view
- Restore default-** Allows you to restore the default settins. However on doing so you may lose previously stored data.

8.2 Image Viewer

Menu > Multimedia > Image viewer

Or on the view finding screen, select **Options > Photos**

The phone will automatically read the entries with the format supported by the phone under the folder **Photos** of **File manager** and display a list of entries. If there is no entry, the list is blank.

On the Image viewer list screen, select **Options>**

View: View the highlighted photo.

Slide show: View images as a slide show.

Edit: Edit the image

Browse style: Select the style of viewing.

Use as: Set the highlighted photo as wallpaper, screen saver, or the photo caller ID of a Phonebook entry.

Send: Send the photo by MMS or Bluetooth, Email

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Delete all files: Delete all the files from the list.

Sort by: Sort the files in the list.

Storage: Select phone or memory card.

8.3 Video Player

Menu > Multimedia > Video player

On the video player list screen, select **Options >**

Play: Play the videos stored in your phone

Use as: Use the stored video file as a screen saver or caller video.

Send: Send the video by MMS or Bluetooth.

Rename: Rename the highlighted file.

Delete: Delete the highlighted file.

Delete all files: Delete all the files from the list.

Sort by: Sort the files in the list.

Streaming URL: Allows you to browse sites like Youtube, Google.

This feature is a network dependant service.

Network profiles: Allows you to use the video as a network profile

Storage: Select phone or memory card.

8.4 Photo editor

Menu>Multimedia>Photo editor

Allows you to resize the images stored in your phone & add image tiles to your images.

8.5 Sound Recorder

Menu > Multimedia > Sound recorder

On the Sound Recorder list screen, you can select:

New Record: Begin recording. The recordings will be saved in the folder **Audio** under the **File Manager** automatically.

Play: Play the recorded sound

Append: continue to record the highlighted recording. (The format must be AMR or AWB).

Send: Send the highlighted record by MMS, Bluetooth or Email.

Use: Send the highlighted record to the ringtone list for profiles.

Rename: Rename the highlighted recording.

Sort by: Sort the sound file Name, Type, Time, Size, None

Delete: Delete the highlighted recording.

Delete all files: Delete all the recordings from the list.

Settings: Set the format of the recording & choose a storage location.

8.6 FM Radio

Menu > Applications>FM radio

Options> Channel List

Allows you to view the channel list

Options > Manual tuning

Allows you to manually enter channel frequencies.

Options > Auto search

Edit the channel list automatically:

To Increase/Decrease the volume:

To increase the volume press the # key and to decrease the volume press the * key.

To switch between channels:

To switch between channels press the number keys on your keypad in accordance to the channel list.

8.7 Slide show

Menu>Multimedia>Slide show

Allows you to view images as a slide show.

8.8 Music Player

Menu > Music player

Create Play list

Before you start to enjoy the music for the first time, you need to create a play list.

You can create a play list automatically.

1.Choose Memory under Pre playlist under player settings to listen to songs stored in your memory card.

2.In Settings, activate List Auto Gen.

3.On the play list screen, select **Options > Refresh List**.

4.The phone will add the tracks with the format supported by the phone under the folder **My music** of the **File Manager** to the play list automatically.

Add to Rings

Rings are the list of ringtones selectable in the profile mode setup. You can select a single track and add it to the Rings.

On the 'play list' screen, select a track and select **Options > Add to ringtones**

9 Mi-Apps

9.1 Mi-Apps

Menu >Applications> Mi-Apps>Java

You can install Java applications to enhance the multimedia function. It also allows you to connect to Snaptu, Nimbuzz and Operamini as well. You can even play games like burnout, cricket 10, need for speed shift, tetris revolution, newshunt & more. There's a free trial available for one time use, however after that you will be charged for using these apps.

9.2 Installing Opera Mini 4.2

It is fast and easy to get the Opera Mini browser on your phone. You are just a few clicks away from browsing the full Web on your mobile phone. See the instructions below to choose the easiest way for you to install it:

1.Download directly on your mobile phone

1.Using your phone's default Web browser, go to **mini.opera.com**

2.Follow the simple on-screen download instructions.

3. After the download, locate Opera Mini on your phone among other Java applications and start enjoying the blazing-fast mobile Web.

2. Download on your computer

1. Go to <http://www.opera.com/mini/download/>.


2. Either: Enter your phone number to receive an SMS with the download link, or Download Opera Mini to your desktop PC or Mac, and then transfer it to your phone via Bluetooth or USB.

3. Start using Opera Mini 4.2

Using Opera Mini to browse the Web with your phone is easy. Here is a quick guide to help you get started.

When you first start using Opera Mini 4.2, after some introductory pages highlighting useful features, you will see a start page that looks something like this:

Guide to the start-page features

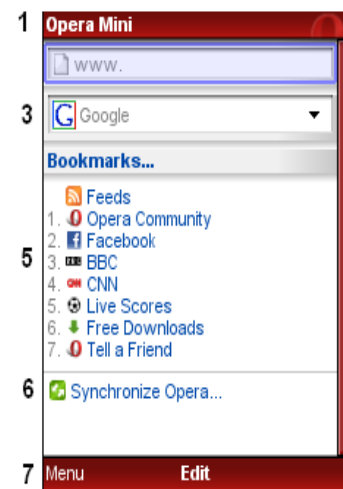

1. Title bar

2. **Address field** — This is used to browse the Web.

3. **Search field** — This is used to search the Web.

4. **Bookmarks** — This provides access to your bookmarks, Speed Dial, notes and saved pages.

5. **Main browser window** — On the start page, some common Web sites are listed in a “Speed Dial”. For details, see “Using Speed Dial” below.

6. **Synchronize Opera** — Opera Link synchronizes your bookmarks, Speed Dial and more across your devices. For details, see “Using Opera Link” below.

7. **Softkeys** — These perform common functions. **Menu** toggles the main menu. To close the menu, tap or click **Back**.

4. Basic browsing

To go to a Web page from the start page, follow these steps:

1. Tap or click the address field.
2. Type a Web address.
3. Tap or click the **Go to** softkey.

5. Navigating a Web page

Pages display in an overview mode when first loaded. This mode displays the pages zoomed out a little to show more of the page. To view a section of the page, follow these steps:

1. Drag or use the arrow keys to pan around the page and find an area you want to view closely.
2. To zoom in on content, tap or click the area.

3. To zoom out, tap or click the **Zoom out/Back** button .

Tip: Press 5 to zoom in and out.

6. Searching the Web

To search the Web directly from the start page, follow these steps:

1. Tap or click the search field.
2. Tap or click the search engine you want to use from the list.
3. Type your search term and tap or click the OK softkey. With use, Opera Mini will automatically complete the Web address you type, based on your history and bookmarks, making address input easy and intuitive.

You can also search within a Web page by going to **Menu >Tools > Find in Page**.

7. Getting more from Opera Mini 4.2

Opera Mini 4.2 offers you even more advanced conveniences for mobile Web browsing, such as Speed Dial for rapid access to your favorite sites, Web-page bookmarking, Opera Link and an array of options to change your settings.

8. Using Speed Dial

Some commonly used Web sites are listed for you in Speed Dial, shown on the start page. To add a Web page to your Speed Dial, follow the steps below:

1. Display the Web page and tap or click **Menu > Tools > Add Bookmarks**.
2. In the Bookmarks dialog, in the Speed Dial field, click the arrow at the far right to display your Speed Dial list.
3. Select the dial in the list where you want the Web page to appear.
4. Tap or click **Save**. You can now easily go to the Web page from the start page.

To manage your Speed Dial, go to **Menu > Bookmarks > Speed Dial > Manage**.

9. Bookmarking a Web address

To save a Web address as a bookmark, follow these steps:

1. Display the Web site you want to save.
2. Tap or click **Menu > Tools > Add Bookmark**.
3. The Bookmarks dialog displays, where you can edit the page information, if needed. You can add it to your Speed Dial here too.
4. Tap or click **Save**.
5. When you want to access the site, tap or click **Bookmarks** and select it from the list.

10. Using Opera Link

Opera Link synchronizes bookmarks, Speed Dial and notes between your phone and other mobile phones or computers running Opera. To use it, choose "Synchronize Opera..." on the Opera start page. To see the

bookmarks, Speed Dial, and notes in any other browser, go to the Opera Link Web page.

11.Context menu functions

Press **1**, or long-click on the screen, to display the context menu for access to other useful functions, including Mobile view, page information and control over loading images. There are additional options if the focus is on a link or image.

12.View pages in landscape mode

Do you want to view the Web on a wider screen? Press ***#** and flip your phone on its side to enjoy browsing in landscape mode. Change the default view to landscape view by going to **Menu > Tools > Settings** and checking **Landscape mode**.

13.Scroll faster with shortcuts

You can scroll at warp speed using your phone keypad. Find your way around Web pages quickly using simple keypad commands. Simply press 2 to go up, 4 to go left, 6 to go right and 8 to go down. Opera Mini snaps the view to the content. Press 5 to zoom in and out.

14.Exiting the Opera browser

When you have finished browsing the Internet, you can close Opera Mini by going to **Menu > Exit**.

10 Bluetooth

Tip:

You can connect wirelessly to other compatible device with Bluetooth technology. Compatible devices may include computers, mobile phones. You can use Bluetooth connectivity to send images, music and sound clips, video clips, and notes.

Since devices with Bluetooth wireless technology communicate using radio waves, your device and the other devices need to be within a range of 10 meters from each other, but the connection may be subject to interference or could face obstruction from stuff such as wall or from other electronic devices. Use the wireless technology of bluetooth to be able to consume battery quantity of electric charge. If you are restricted by something when using bluetooth technology, consult your local Micromax support/service station.

10.1 To Power ON/OFF

Menu > Connectivity >Bluetooth > Power (On/Off)

10.2 Visibility

Menu > Connectivity >Bluetooth > Visibility

Tip: Please activate the Bluetooth first.

10.3 To Search My (new) device

Menu > Connectivity> Bluetooth > My device > Inquiry new device

Tip: Please activate the Bluetooth first.

10.4 My name

Menu > Connectivity> Bluetooth > Change device name

10.5 Advance

Menu > Connectivity> Bluetooth >Advance

View more settings under this folder.

Tip: Please activate the Bluetooth first.

11 Organizer

Functions	Description
View the calendar	Menu > Organizer > Calendar
Task	Menu>Organizer>Task
Set the alarm	Menu > Organizer > Alarm > Edit
World clock	Menu > Organizer > World clock
Stopwatch	Menu > Applications > Stopwatch > Typical stopwatch > Split timing/Lap timing / View record Press Start to start timing, and press Split / Lap continuously to record more than one time. Press Done to save the time. Menu > Extra > Stopwatch > nWay stopwatch Press Start to start timing, and press the corresponding Navigation key to activate the sub-timing. The main timing will continue to add. Select Stop to stop the main timing and the sub-timing. Press Reset to clear all the time.
Calculator	Menu > Applications > Calculator
Currency converter	Menu > Applications > Currency converter Input the exchange rate and Press OK . Select the exchange rate, input the figure and press OK .
Text Reader	Menu > Applications > Text reader

12 File Manager

When an USB cable is connected, you can use the phone as a USB mass storage.

Functions	Description
View folders	Menu > File manager> Options > Open
View detailed infomation	Menu > File manager > Options > Open Options > Detail
Format	Menu > File manager > Options > Format Tip: The Format function will delete the data you have created and saved. Please back up important data and keep them properly.

13.1 WAP Browser

Menu > Connectivity > WAP

You need to make the relevant settings in WAP Setup before you use the WAP browser to surf the web. When the WAP browser is activated, if a homepage is set in WAP Setup, the phone will link the website indicated by the homepage; otherwise, you may enter a website and the phone will connect to it.

When surfing the web, select **Options >**

Refresh: To refresh the web page.

Homepage: To link the homepage.

Input URL: input a website address.

Add Bookmark: Add to bookmark.

Set Homepage: set the URL as homepage.

Forward/Backward: To turn to the next /previous page.

Advance: Show URL info, Bookmark, Save item.

Exit: To exit the browser.

13.2 WAP Setup

WAP settings are required for surfing the web with WAP. Follow the steps below to set up a WAP account:

- Connectivity > Data Account > GPRS > Add account > Add account name/ APN/ Username & password > Save.

Then go to:

- Menu >Connectivity > WAP >Settings > Profiles > Add new > Account Name/ Homepage/ Data Account (select the previously created data account) > Select connection type (HTTP/WAP- Indside HTTP & WAP enter the correct proxy address & port > Done > Save the account >Go to the created account & activate.

Menu > Connectivity> WAP> Settings>Profile

You can set the following:

Account: To select from the GPRS connection list.

Connection type: To set WAP or HTTP connection mode.

Home page: To set the address of the homepage. The phone has a default and you can modify it.

14 WiFi

Menu>Connectivity>WIFI

Connect to the Internet using WiFi. Wifi has the following options to connect to available networks.

Available Networks: All the WiFi networks available in range will be displayed and the phone can be connected on any network within that range.

Scroll down to the list of available networks, Press 'Options' to perform various operations related to WiFi settings.

15 ezmail

Micromax **ezmail** simplifies sending & receiving emails on the go. As long as your phone is under good network coverage, you can send, download & compose emails without a hitch. To minimize your efforts further, use the trackpad for quick access and browsing. Before using ezmail, you need to make sure that: -

A)Either GPRS (or any other data plan) is activated on your SIM. To make sure that GPRS plan is activated on your SIM, Please try to open your phone's browser and see if you are able to browse through the internet. Please check with your operator for further information.

Note: ezmail will work with netconnect internet profiles only. Below are the examples for the same:

- Airtel → Mobile Office (APN is : airtelgprs.com)
- Idea → Idea internet (APN is : internet)
- Vodafone → Vodafone GPRS (APN is : www)
- Reliance → Reliance Netconnect (APN is : rcomnet)
- Aircel → Aircel Internet (APN is : aircelgprs)
- BSNL → BSNL GPRS (APN is : bsnlnet)
- TATA DOCOMO → TATA DOCOMO INTERNET (APN is : TATA.DOCOMO.INTERNET)
- MTNL (Mumbai) → MTNL- Mumbai Internet (APN is : gprsmtnlmum)
- MTNL (Delhi) → MTNL – Delhi Postpaid (APN is : mtnl3g)
- MTNL (3G) → HSDPA GPRS prepaid (APN is : ppshsdpa)

B)Or you are in a WI-FI zone and you have selected WI-FI network on your phone. You can set the WI-FI functionalities as follows: Go to Menu>Connectivity>Wi - Fi>Search for network>Connect to your Wi-Fi Network. To make sure that WI-FI is activated on your phone, Please try to open your phone's browser and see if you are able to browse through the internet.

Note: If your Wi-Fi is firewall protected and you are not able to use ezmail services, please contact your IT Help to further resolve the issue.



User manual

What's more? You can also customize your ezmail with ezmail manager option that is available at the bottom of the ezmail menu.


Email accounts set up

To setup a new account, all you need is your existing email address and password. Follow the steps below to successfully use the ezmail app-

- Launch ezmail.

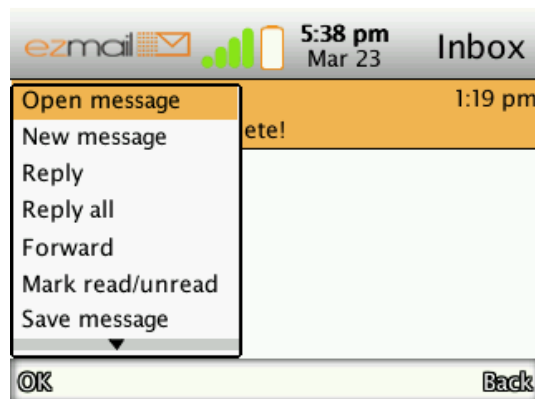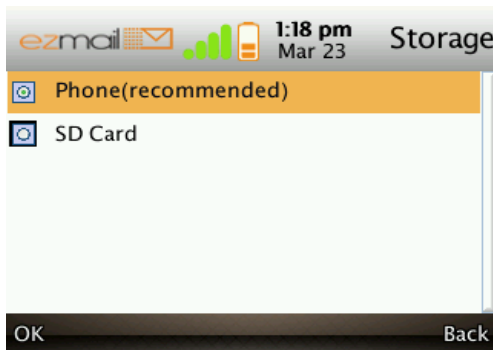

- Click on Continue & fill in the valid account information.

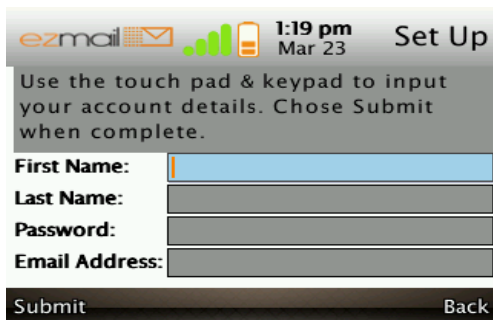

If the envelope image on the task bar above is blinking, it indicates that a command currently given by you is under process.

Example:

First Name: User

Last Name: Micromax

Password: *****

Email Id: user.micromax@abc.com

- Click on Submit.

Once your email account is validated, you'll be taken to your ezmail emailing page – your Inbox. You can then start sending and receiving emails right away.

If you would like to configure your own email domain (Example: shyamenterprise.com) Please visit our website www.micromaxinfo.com/ezmail or contact Micromax care for further information.

Note: You can configure up to 5 email accounts on ezmail.

Unified Inbox

User manual

You will receive all your new emails in Inbox. Your Inbox will be your home screen. There are set of basic emailing options.

Open Message – This will open up your email, you can scroll up/down within Your emails using scroll wheel.

- New Message – You can compose a new email, you can add CC/BCC etc
- Reply – You can reply to the email.
- Reply All – You can do a reply all to the emails
- Forward – You can forward your emails. All attachments can also be forwarded.
- Mark Email as read/unread – You can always mark your emails as read/unread.
- Save message – Using this option, you can save your email in saved folder and view it later.
- Delete message – You can delete your emails
- Delete all messages – You can delete all the emails in a particular folder
- Sent folder – This will show you all of sent emails
- Draft folder – You can keep your emails as draft and send them whenever you want.
- Saved folder – This folder contains all your saved emails
- Trash Folder – You can view all the deleted emails. You can restore emails from trash folder or delete the, permanently.



Search

You can search your emails using date, subject or from address.

ezmail 1:20 pm Mar 23 Search

Looking for something?

Date: In the past week

Attachments: n/a

Subject:

From:

OK Back



Contacts

You can download contacts from your email address. Ezooming supports contact download from all the major email service providers like Gmail/yahoo/hotmail. You can add/delete/update contacts in your contacts folder.

Auto-fill during compose email/reply/reply all/forward

Now you don't have to remember email IDs, all you need to do is – Download contacts and ezooming will save all your contacts. So next time when you **compose/reply/reply all/forward** a new email and press 'r' in the "To" field, ezooming will display all the email IDs starting with 'r'. And you can select the intended address.

Email notifications

You will receive a new email alert and a new email icon on your home screen. You can set the default email alert from sounds and alert option in your phone. Here is how you can set up sound and alerts: Go to **Menu>Settings>User profiles>General (or other profile)>Click option>Customize>Tone setup>SIM1 message tone/SIM2 message tone** and you can select the notification type for your new emails.

Emailing shortcuts

Few emailing shortcuts to make your emailing experience better. You can use these shortcuts in each of the folders (Inbox, sent, draft, saved and trash)

- 1.#C: Compose a new email from your Inbox screen.
- 2.#R, A, F: Reply, reply All, Forward, respectively
- 3.#D: delete email from Inbox and view email screen.
- 4.#Space bar: Page down in your Inbox screen
- 5.#T: In email view screen, it will take you to the top of Inbox
- 6.#Space bar: Page down in your email view screen
- 7.#Function key+space bar: Page Up in your Inbox:
- 8.#Enter key: open selected message
- 9.#Delete key: delete selected message
- 10.#Function key+p: Opens up Ezooming Manager
- 11.#Function key+c: Opens up your contacts list.


ezmail Manager

It provides you features related to email accounts and memory.

Email accounts –

You can add/delete/update your email account. You can add upto 5 emails accounts. Here's how you can do it: While in the Inbox screen, click on menu and scroll down to the last option ezooming **Manager>Email**

accounts.

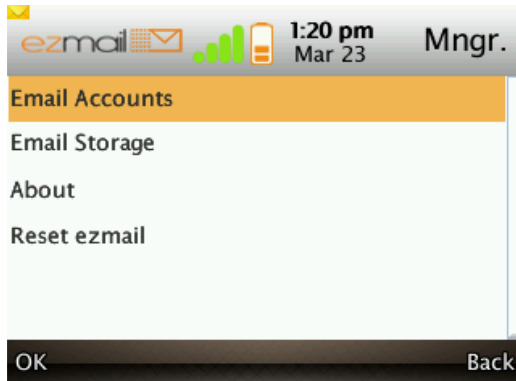

Here you can easily add/delete/update your email account. You can also choose your primary email address, this email address will be used as default email address in 'From' when you compose a new email. You can change it as follows:- Go to ezmail Manager→Email accounts→select the account which you want to set up as your primary address click on menu and set it as primary account.

Email storage –


It will display you the active email memory. You have an option to switch your storage memory either to phone or external memory.

SW version –

It will display your current software version.

Reset ezmail –

It will do a factory reset and all your settings/email accounts/contacts will be reset to factory default.

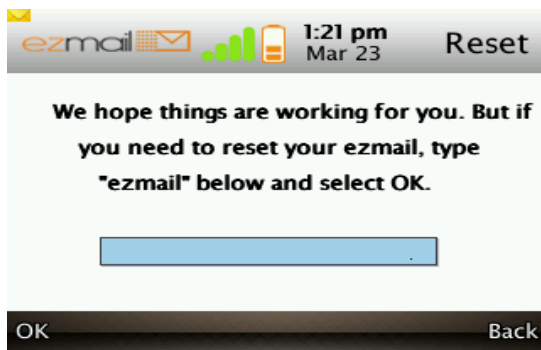

Save sender

You can always save the sender and Ezmail will add that contact in contact list.



Attachment

You can view Word, Excel, PDF, and image attachments. Text extracted from Word, Excel and PDF attachments can be viewed on the ezmail. During the conversion of attachments to clear text, font formatting, table formatting, images, some formulae, unusual symbols, and tracked changes and comments may be lost. For Word and Excel, versions 97 through 2010 are supported. Password protected files will not be accessible on Ezmail. Most image formats such as JPG, GIF, BMP, and many others can also be viewed on the Ezmail.

Exit

To stop using the push email services, click on exit. You will not receive emails after exiting from ezmail emailing. To restart push emailing services just launch the ezmail application again.

Note:

Since your device supports 2 SIMs on a single RF channel, there might be instances or occurrences of a voice packet being lost on SIM1/SIM2, provided when SIM2/SIM1 is being occupied for email transceiving. This is a standard protocol behavior on a Dual SIM/Dual Standby device and Micromax holds no responsibility for any loss of data or information on the device.

16 Maintenance

Use a dry soft cloth to wipe general dirt.

Do not use a hard cloth, benzene or thinner to wipe the phone, otherwise, the surface of the phone will be scratched or could even result in the fading of colour.

17 Taking Care of your Device

- Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your phone:
- Always keep the small parts of the phone away from children.
- Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use chargers indoors

18 After Services

For details, see the After Service Guide supplied with the phone.

